



Dallam Court, Dallam Lane, Warrington, WA2 7LT

T: +44(0) 845 071 0985 F: +44(0) 845 071 0989

www.corerfid.com – www.rfidshop.com – Email: info@corerfid.com

CoreWedge Read/Write for I-Code Mifare UL, and Mifare 1K

The CoreWedge software allows users to start using the SDiD readers out of the box, acting as a keyboard wedge that inserts the tag ID and/or tag data into the active application, this version of the software runs on the SDiD 1020 and supports the following tag types:

- **I-Code SLI** – Read/Write
- **Mifare Ultralight** – Read/Write
- **Mifare Classic 1K** – Read/Write

REQUIREMENTS

1. Microsoft® Windows Mobile 5.0 or higher
2. SDIO Slot
3. SDiD 1020
4. Windows 2000, XP or Vista
5. ActiveSync or Windows Mobile Device Center

FEATURES

1. Inputs TagID and Data directly into any Windows programs on the PDA as if it was typed in using the keyboard.
2. Have options of sending just the TagID, just the Tag Data (if available) or both.
3. Options of having 'Enter' suffix after the ID or data is inputted.
4. Write ASCII characters to data area of the tags.
5. Compatible with the following tags (depending upon version purchased):
 - a. I-CODE SLI
 - b. Mifare Ultralight
 - c. Mifare 1K

Features and specifications subject to change.